



Intellicall - Ultratel Mass Flex ANI Test Program Instructions

Calling a Group of Payphones for Mass Group Response

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING THIS PROGRAM.

NOTE: The Mass Flex ANI Test Program requires the use of a timed call home feature. If you have payphones locations that cannot be dialed directly, (behind a PBX, auto dialer, etc.), and they require the ability to call back at a predetermined time of day, **DO NOT** use this program on those payphones. If you make the following changes to those payphones, they will discontinue calling home and you will be required to reset each payphones from the payphones's location to allow it to start calling back again. If you have further questions or need more explanation, please contact our office at 1-877-211-9901.


Programming Instructions:

1. Edit the .BRT files to **activate** the Mass Flex Ani Test Program.
2. Download the payphones to **activate** the Mass Flex Ani Test Program.
3. Wait for test to occur.
4. Edit the .BRT files to **deactivate** the Mass Flex ANI Test Program.
5. Download the payphones to **deactivate** the Mass Flex Ani Test Program.


1. Make Changes to the .BRT Files to Activate.

- 1a. Click on '[B] Configuration Options Menu', within the .BRT files you want to edit.
- 1b. Click on '[F] Special Numbers Menu'.
- 1c. Click on '[C] Out Call Assignment List'.
- 1d. Arrow down and highlight, 'Timed Call-out'.
- 1e. Press, 'N' to type the out call number of 18XXXXXXXX on line 1. as shown below.

(replace 8XXXXXXXX with the toll free number we provided to you)

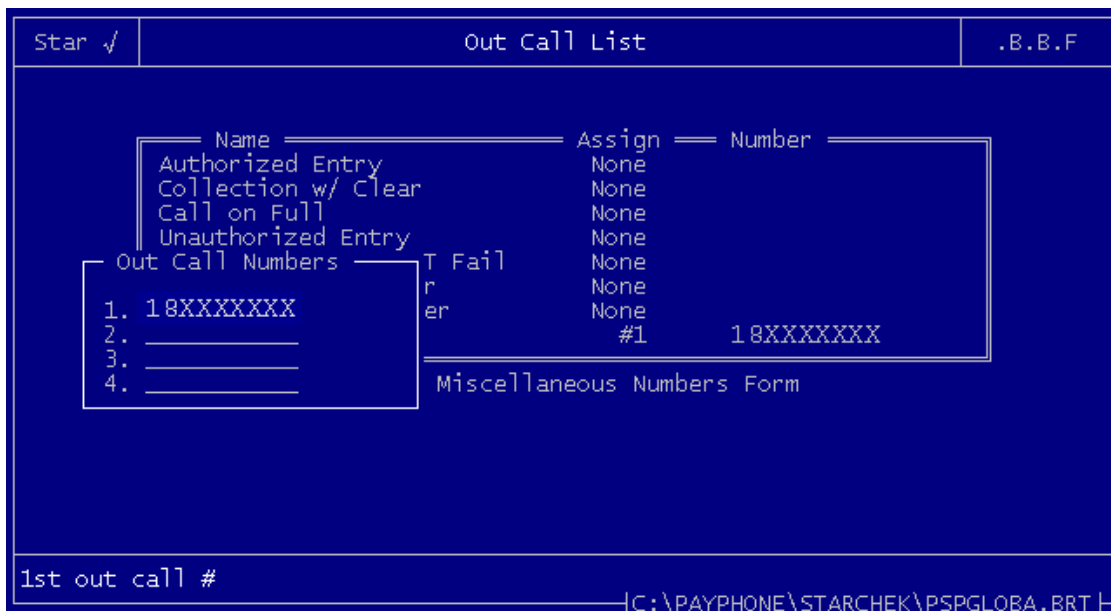

- 1f. **Press F10** to save.
- 1g. **Press enter** to edit the assignment for, **'Timed Call-out'**.
- 1h. Edit the assignment information as pictured below changing the following settings:
 - a. Edit **'Assignment'** by pressing the space bar to choose **#1**.
 - b. Set all days of the week to **'Y'**.
 - c. Set the time of day to your choice.

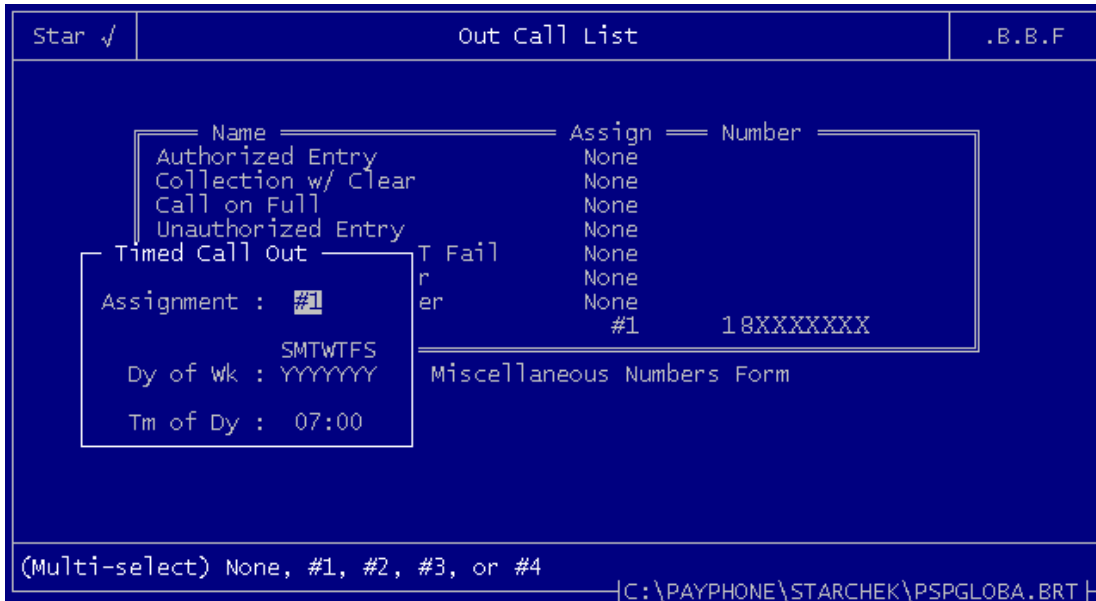

- 1i. **Press F10** to save.

2. Download .BRT Files of Saved Changes to the Payphones to Activate the Test.

3. Wait for Test to Occur.

- 3a. Once downloaded, 12 hours must pass before the call home clock begins to function.
- 3b. You will be emailed within an hour of the payphones calling our access number. For every call that reaches our network, you will be emailed a report. You may wish to wait until our report is emailed to you before proceeding to step 4. If your phone didn't call out, you may need to wait another 24 hours in case of busy circuits.

4. Make Changes to the .BRT Files to Deactivate.

- 4a. Click on **'[B] Configuration Options Menu'**, within the .BRT files you want to edit.
- 4b. Click on **'[F] Special Numbers Menu'**.
- 4c. Within **'[C] Out Call Assignment List'**, arrow down and highlight, **'Timed Call-out'**.
- 4d. **Press enter** to edit the assignment for, **'Timed Call-out'**.
- 4e. Edit **'Assignment'** by pressing the space bar to choose **'None'**.
- 4f. **Press F10** to save.

5. Download .BRT Files of Saved Changes to Payphones to Deactivate the Program.

.....

You have completed the steps to produce a test from your payphones to the Mass Flex ANI Test Number. If you have any questions, or need further assistance, please contact our office at: 1-877-211-9901. Thank you for your interest in our program.